



PIEZOMAT

- The **PIEZOMAT** torch works with propane and it is self igniting by pressing a lever in the handle. When you release the lever, the flame is extinguished and the gas flow is interrupted. To start welding again, just press the lever again.
- It is provided with an ergonomic handle with a swivel connection and it can be equipped with a range of special purpose lances.
- A rotating device (360°) in the handle front allows quick installation of the torches.
- It is equipped with a hold open button to keep the trigger lever in "open" position.
- The handle is equipped with a "memory" knob. After the first regulation no more adjustments will be necessary. Upon reigniting the torch, the initial setup will be maintained.
- Each torch is equipped with a plastic or metal stand.



■ **Piezomat Handle**  
Code 1027.I




■ **Piezomat braze welding lance**  
Code 1027.SB



### SPECIFICATIONS

Code	Description	Head Ø
1027.SB	Piezomat braze welding lance	20 mm

■ **Piezomat burner lance**

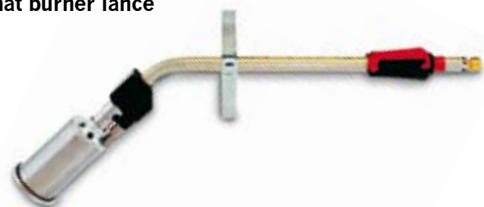

### SPECIFICATIONS

Code	Description	Head Ø	Stem
1027.B524	Piezomat Burner lance	50 mm	240 mm
1027.B664	Piezomat Burner lance	60 mm	640 mm

■ **Piezomat hot air burner lance**  
Code 1027.HA



### SPECIFICATIONS

Code	Description	Head Ø
1027.HA	Piezomat hot air burner lance	40 mm

■ **Piezomat lance for metalworks**  
Code 1027.SI

